

TakeAwayDisco.com - Instructions for Disco Lights

If you have any questions call 07834 377 580 and we'll be happy to help.

Safety

It is important to set up the disco lights on a safe and level surface. Do not block fire exits and make sure that it is not possible to trip over any cables in any area that is accessible by guests, members of the public or staff/contractors.

Setting up the lights on the lighting stand

1. Loosen the hand-turn bolt at the top of the 3 legs on the lighting stand tripod
2. Pull the stand legs out until they stop at the marker on the middle of the stand
3. Tighten the bolt to secure it - just tighten it until there's resistance - the stand will support itself and over-tightening will break the bolt
4. At the top of the stand there is a smaller bolt which holds the lighting bar on to the tripod base - loosen this until the bolt is completely out of sight when you look down the middle of the stand - you don't need to take it out, just make sure it's not blocking the tube at all
5. Place the lighting bar onto the stand by slotting the middle post into the top of the stand
6. Tighten the bolt to secure the lighting bar to the tripod base
7. There are two sets of wing nuts in the middle section of the tripod base - these control the height - loosen each one in turn and then adjust the stand to the desired height and tighten to secure

Connecting the power to the lights

1. Before connecting the lights to the mains power check that the link cables are fully secured in both sides of each light - they can become dislodged in transit
2. Next plug in the power cable into the only available socket on the light at the end of the light bar
3. Plug the other end into the mains power socket on the wall and the lights should switch on

Setting up the lights to work in "sound-to-light" mode

1. With the lights switched on, look to the back of the light where you can see a 4 digit display - this display should show SO-4
2. If the display doesn't show SO-4 press the MODE button until SO-(any number) appears - if you go past then press it a few more times and it will get back to SO-(any number)
3. If the light is on a number other than 4, such as SO-3, then press the UP or DOWN buttons until the display shows SO-4
4. Do this for each light and they are correctly set up - the lights will change colour when they hear music or any sound - try clapping and the lights should change colour
5. Feel free to experiment with other modes - we think SO-4 gives the best colour combination
6. If the lights are set to SO-4 and do not respond to loud noises it is possible that the sensitivity setting is incorrect - whilst on SO-4 mode, press the SETUP button and it should show SJ-7 - if it's a lower number then the light is set to only respond to very loud noises - we like to set this to 7 for best results