

TakeAwayDisco.com - Instructions for uplighters

Setting up

Uplighters must be placed in areas where they will not cause a trip hazard or block any fire exits. Please also make sure that it is not possible to trip over any cables. It may be necessary to tape cables to the floor in any area that is accessible by guests, members of the public or staff/contractors.

1. Loosen the two screws on the side of the uplighter so that the handles move freely
2. Pull the two handles away from each other until they stop at around a 90° angle
3. Position the light so that the handles are on the floor and the light is pointing upwards
4. Loosely tighten the two screws on the side of the uplighter - just enough to keep it pointing upwards
5. Connect the power lead to the uplighter
6. Connect the other end of the power lead to a plug socket
7. The light should now be switched on - see below for instructions for setting your preferred colour

When the power is switched off the uplighter will remember your chosen colour so you can set them up in advance and switch off the power until you need to use the uplighters.

Using preset colours

There are two methods of selecting the colour of the uplighters. The first method is to use one of the seven preset colours. To do this press the MODE button until you see CL-# displayed (# will be a number from 0 to 7). Next press the UP or DOWN buttons to cycle through the colours.

Available options are:

CL-1 Red	CL-5 Yellow
CL-2 Green	CL-6 Pink
CL-3 Blue	CL-7 White
CL-4 Cyan / light blue	CL-0 Black / off

If the light is flashing press SETUP until FS.## is displayed and use the UP or DOWN buttons to set it to FS.00

Using custom colours

If none of the preset colours are suitable you can set a custom colour by using the following method. Press the MODE button until r.### is displayed (# will be a number from 0 to 255). From here you can set the brightness of the red LEDs by using the UP or DOWN buttons. Next press the SETUP button and g.### is displayed. Use the UP or DOWN buttons to set the brightness of the green LEDs. Press SETUP again and b.### will be displayed. Use the UP or DOWN buttons to set the brightness of the blue LEDs.

If the light is flashing press SETUP until FS.## is displayed and use the UP or DOWN buttons to set it to FS.00

Technical support

We strongly recommend that you have a trial run of the equipment at home before the day of your event so we can help you rectify any problems. Technical support is limited at weekends, but if you contact us during the week, we will do all we can to assist.

You can call us on 07583 279 269. At weekends, our engineers are usually busy at weddings or other large events so may be unable to take phone calls. If there is no answer, please email takeawaydisco@gmail.com marked as urgent. If we can, we will call you back but this is a last resort.